



# Sony Vaio PCG-71312I Keyboard Replacement

Short guide to replace a non-functioning keyboard.

Written By: Maxine Filcher



## INTRODUCTION

Outline what you are going to teach someone how to do.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



### PARTS:

- [keyboard panel](#) (1)
-

## Step 1 — Battery



- ⚠ Power down, and disconnect from power supply.
- Use your finger to unlock the tab by pressing the slide away from you.

## Step 2



- Hold the release slide, while using thumb to apply upward pressure.





### Step 3



- Pull the battery off

### Step 4 — DVD Drive

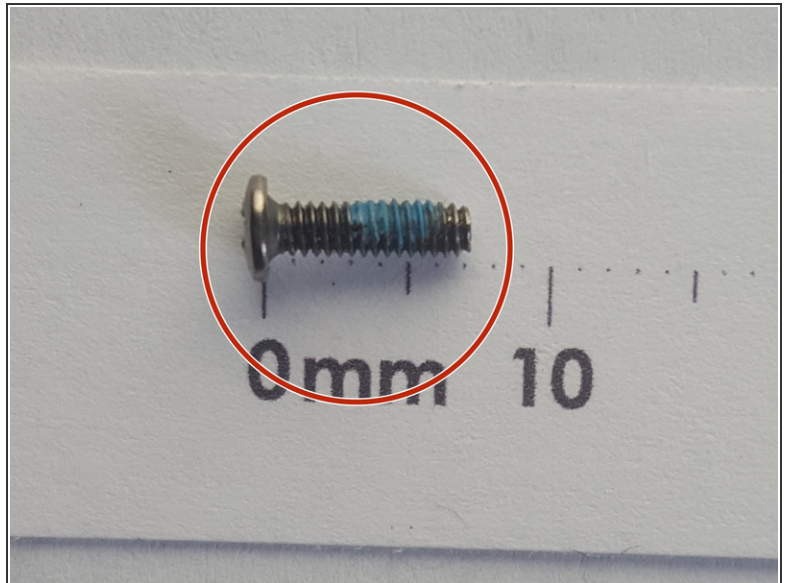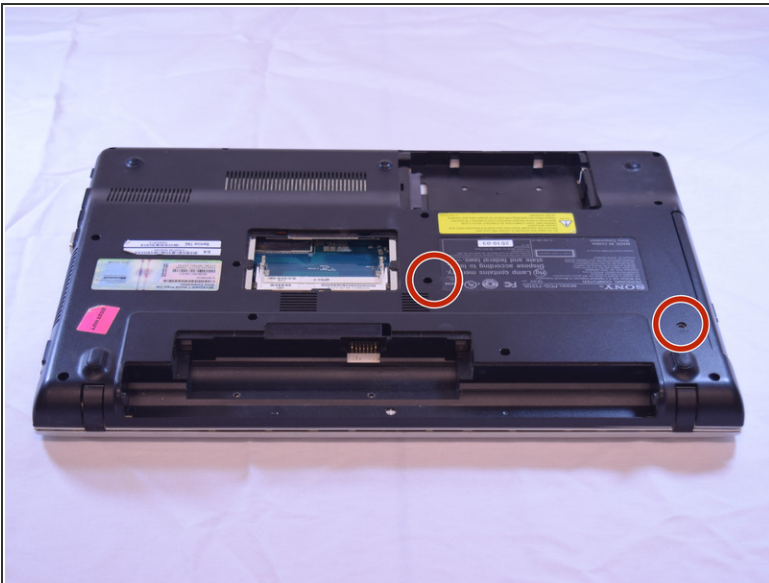



- Remove two 7mm PH01 screws

## Step 5




- Grasp the DVD drive's face plate with your fingers, and pull out.

## Step 6 — Keyboard

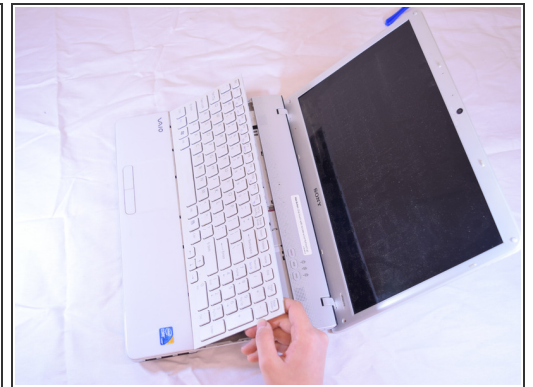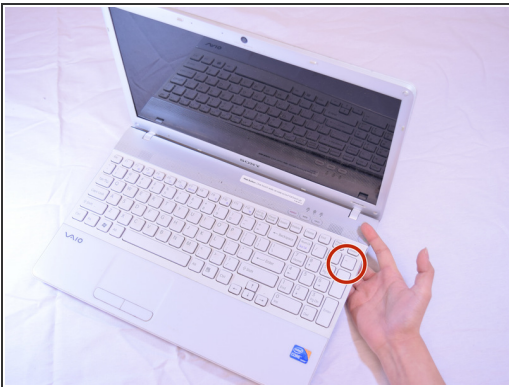

- Within the DVD drive compartment, press on the hole to push the keyboard out of its placement.
- The keyboard may need to be loosened on its edges with a plastic spudger.

## Step 7

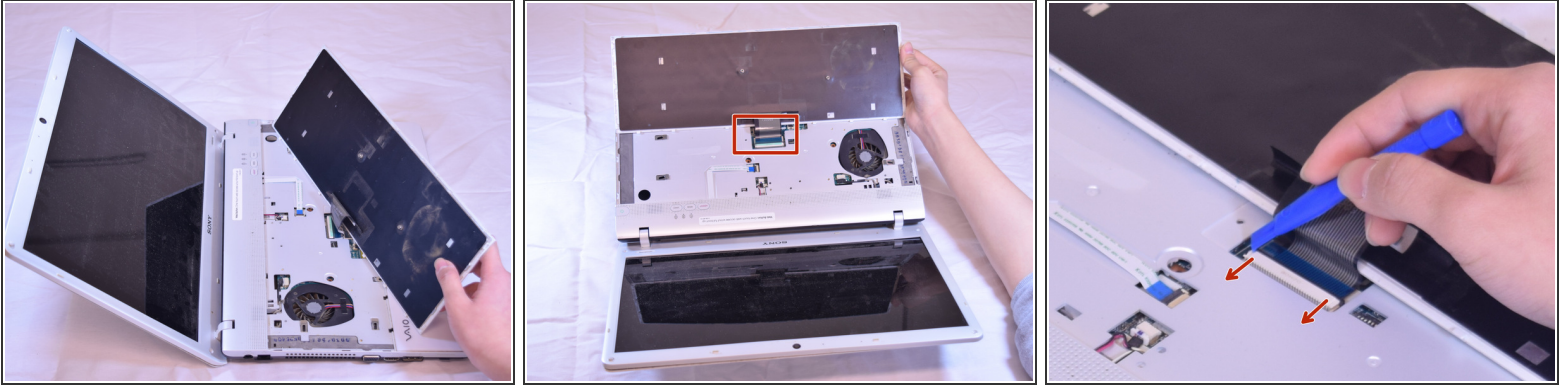

⚠ Carefully pull the keyboard back to expose ribbon connector.

- Using a spudger, or your finger tips, carefully slide the the ribbon keeper open.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 07:17:41 PM.